

These LED lights are certified for use on power driven vessels under 20 meters (65.6 ft.) in length operating on a nominal 12 volt system. All pole lights must be used with separately mounted bases (such as PERKO figure numbers 1045, 1046, 1047, 1048 or 1060 with compatible locking collars or threaded collars). When properly installed, these replacement poles will comply with A.B.Y.C. Standards C-5 and A-16, EN ISO 19009, '72 COLREGS and the U. S. Inland Rules.

MOUNTING INFORMATION

(Read all instructions before proceeding.)

- 1). For information on proper light selection, positioning and configuration, refer to A.B.Y.C. Standards C-5 and A-16 (1), the '72 COLREGS, and the U.S. Inland Rules (2).
- 2). The center of the lens of white all-round pole lights must be located at least 1 meter (39.4") above the center of the lenses of either the bi-color or the red and green side lights on the vessel. Be sure to use a light with a sufficiently long pole to meet this requirement.
- 3). These poles can be mounted in either 0° or 5° raked bases.
- 4). To store folding lights (Series 1665) grasp both sections of pole and push towards center coupling (See Diagram #2). While pushing, rotate one end of pole until screw is positioned in open slot. Gently pull poles apart until they are clear of each other, then fold one pole onto the other with wire passing through slot. NOTE: The wire will remain connected to both poles and will be damaged if too much pulling force is applied.

Pole light collar configurations used in common PERKO base applications:

A). PERKO bases with eccentric (locking) collars

Perko Series 1045, 1046, 1047 & 1060

B). PERKO bases with threaded collars

Perko series 1048 and special versions of Perko Series 1045 bases

(1) American Boat & Yacht Council, Inc.
613 Third Street, Suite 10
Annapolis, MD 21403

(2) U.S. Coast Guard
Washington D.C. 20593
(or your local C.G. Office)

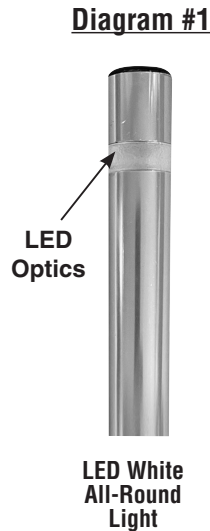


Fig. 1444

Fig. 1665

